

OPERATION AND MAINTENANCE INSTRUCTIONS FOR 48000 SERIES ROOF TOP AIR CONDITIONERS AND CEILING PLENUMS

MODE D'EMPLOI ET UTILISATION DES CLIMATISEURS DE TOIT DES SÉRIES 48000 PLÉNUM DE PLAFOND

TABLE OF CONTENTS

| I. | General Information | 2 |
|------|--|---|
| II. | Standard Ceiling Plenum Control Panel | 2 |
| III. | Standard Ceiling Plenum Operation | 3 |
| IV. | | 4 |
| V. | Wall Thermostat Identification and Operation | 6 |
| VI | Warranty Service | 6 |

I. GENERAL INFORMATION

These air conditioners were designed to operate from a 115 VAC, 60 HZ, 1 Phase power supply. Anytime an air conditioner is not operating properly, the power supply should be examined by a qualified technician to verify that the air conditioner is receiving the proper power supply.

The ability of the air conditioner to maintain the desired inside temperature depends on the heat gain of the recreational vehicle.

The size of the vehicle, amount of window area, amount of insulation, direct exposure to the sun, outside temperature and the number of people in the recreational vehicle may increase the heat gain to such an extent that the capacity of the air conditioner is exceeded.

As a general rule, air entering the air conditioner will be cooled about 15 to 20 degrees, depending on the outside temperature and humidity conditions.

For example, if the air entering the return air grilles in the air conditioner is 80 degrees F., the air leaving the discharge grilles in the air conditioner will be 60 to 65 degrees F.

As long as this temperature difference is being maintained between the return air and discharge air, the air conditioner is operating at its capacity. If the desired inside temperature (normally 80 degrees F) cannot be maintained, then the heat gain of the RV is too great for the capacity of the air conditioner.

Parking the vehicle in a shaded area, keeping windows and doors shut and avoiding the use of heat producing appliances in the vehicle will help to reduce the heat gain. When possible, the addition of insulation and tinted glass (especially in uninsulated vans) should be considered.

NOTE

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective "chill chaser". It is not a substitute for a furnace.

R410A Roof Top Air Conditioners


High Pressure Switch Lockout Circuit


Air conditioners and heat pumps using R410A refrigerant utilize a factory installed High Pressure Switch Safety Circuit. In the event of an abnormal condition (failure of fan motor, dirty condenser coil, dirty filters), the high pressure switch will prevent the compressor from continuing to run. Once the high pressure switch has tripped, this safety circuit will "Lock Out" the compressor preventing it from trying to restart or run until the 115 VAC supply power has been turned off and then back on to reset the High Pressure Switch Safety Circuit. If repeated trips of the high pressure switch lock out occur, then you must have the unit serviced by a qualified technician.

II. CONTROL PANEL

If your RV air conditioner is operated from the control panel located in the ceiling assembly, then there are three controls on the ceiling assembly that help you control the air conditioner. They are as follows:

- A. The Selector Switch The selector switch determines which mode of operation the air conditioner will be in. By rotating the selector switch, the operator can obtain any system function desired. System functions vary depending upon options of both the roof top unit and ceiling assembly. Figure 1 shows selector switch location and lists all available functions by model.
- The "Operation" section explains the operational characteristics of each mode of operation.
- B. The Thermostat (temperature control) In the cooling mode, the thermostat regulates the "ON" and "OFF" temperature setting at which the compressor will operate.
 - For "Heat/Cool" models, the thermostat also controls the "ON" and "OFF" temperature settings of the heater assembly (See Figure 1).
- C. Louvers The louvers are located at both ends of the ceiling assembly shroud and are used in directing the discharge air from the unit.



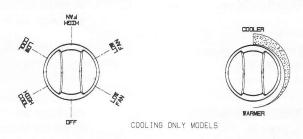

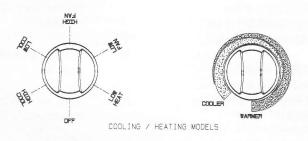


FIGURE 1

III. OPERATION

- I. For Cooling (Refer to Figure 1, page 3).
- A. Turn the selector switch to the "LOW COOL" or "HIGH COOL" position.
- B. Rotate the thermostat (temperature control) to the position that is the most comfortable to you. The thermostat will turn the compressor on when the temperature of the air entering the air conditioner rises a few degrees above the setting you have selected. Then the temperature of the air entering continues to cycle the compressor on and off in the above mentioned fashion until the selector switch is turned to another mode of operation.
- C. Position the louvers to the desired direction the discharge air is to flow.

Note: The fan operation is constant, only the compressor cycles on the thermostat.

II. Operation During Cooler Nights (Cooling Operation).

It is important, when the outdoor temperature drops in the evening or during the night to below 75 degrees F., that the thermostat (temperature control) be set at a midpoint between "Warmer" and "Cooler". If the setting is at "Cooler", the evaporator coil may become iced-up and stop cooling. During the day when the temperatures have risen above 75 degrees F., reset the thermostat switch to the desired setting.

NOTE

Should icing-up occur, it is necessary to let the cooling (evaporator) coil defrost before normal cooling operation is resumed. During this time, operate the unit in the "HIGH FAN" position with the system at maximum air flow. When increased or full air flow is observed, the cooling coil should be clear of ice.

III. Short Cycling

When an air conditioner is in operation, its compressor circulates refrigerant under high pressure. Once off, it will take two to three minutes for this high pressure to equalize.

The air conditioning compressor is unable to start against high pressure. Therefore, once the air conditioner is turned off, it is important to leave it off for two to three minutes before restarting.

Short cycling the compressor (or starting it before pressures have equalized), will in some instances, kick the circuit breaker or overload.

IV. For Heating ("Elect-A-Heat" Ceiling Assembly Model Only) Refer to Figure 1, page 3).

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective "chill chaser". It is not a substitute for a furnace.

Do not expect the heating coil on your heater to glow. Because the fan draws in cold air and forces it over the coil, the coil will not turn red. A hint of red may occur where the moving air does not directly touch the coil.

- A. Turn the selector switch to the "LOW HEAT" position. At "LOW HEAT", the fan operates on low speed with heat output at maximum.
- B. Rotate the thermostat (temperature control) switch to the position that is the most comfortable to you. The thermostat will turn the heater on when the

temperature of the air entering the air conditioning unit drops below this setting a few degrees and automatically turns off when the temperature of the air entering the air conditioner rises a few degrees above this setting. The heater will continue to cycle on and off in this fashion until the selector switch is turned to another mode of operation.

C. Position the louvers to the desired direction the discharge air is to flow.

Discharge air temperature can be controlled to some extent by opening or closing the louvers.

When the louvers are closed, the warmest localized discharge air is achieved. Fully opened louvers will throw the warm discharge air to the back and front of the vehicle for more efficient circulation and faster warm-up. Although the air temperature is lower with the louvers fully opened, the heating capacity is still the same.

- V. For Air Circulation Only (Refer to Figure 1, page 3).
- A. Turn the selector switch to "LOW FAN" or for maximum air flow, to "HIGH FAN".
- B. Position the louvers to the desired direction the discharge air is to flow.

NOTE

When the selector switch is in the "LOW FAN" or "HIGH FAN" position, the blower motor will operate continuously.

IV. MAINTENANCE

I. Owner

One of the biggest advantages to your new Coleman-Mach air conditioner is that the maintenance needed to keep the unit in good care is minimal. In fact about the only thing you, the owner, must take care of is the cleaning and replacement of the filters.

Filters are made from long life non-allergenic natural fibers which can be cleaned and reused, and which completely filter the circulated air when the air conditioner is in operation. If the filters are not cleaned at regular intervals, they may become partially clogged with lint, dirt, grease, etc. A clogged filter will produce a loss of air volume and may eventually cause an icing-up of the cooling (evaporator) coil.

IMPORTANT

Do not operate your air conditioner for extended periods of time without the filter installed.

An even more serious condition occurs when the air conditioner is operated without a filter. When this happens the lint, grease, etc. that are normally stopped by the filter are now accumulating in the cooling coil. This not only leads to a loss of air volume and a possible icing-up of the cooling coil, but could also result in serious damage to the operating components of the air conditioner.

We recommend that the filters be cleaned and changed at least every two weeks when the air conditioner is in operation.

Cleaning and/or changing the filters:

- 1. Disengage the two 1/4 –turn fasteners that secure the ceiling assembly grille to the ceiling assembly (See Figure 2).
- 2. Lower the grille and filters from the ceiling assembly.
- 3. Take filters out and either clean or exchange with other filters (See Figure 2).
- 4. If the vehicle is equipped with a flush mount ceiling assembly, remove the four return air grille screws. Remove filter from grille and either clean or exchange with new filters.

NOTE

If replacement filters are necessary, the filters can be purchased from most Airxcel, Inc. Authorized Service Centers. It is recommended that spare filters be carried with the RV at all times to replace worn, torn or deteriorated filters.

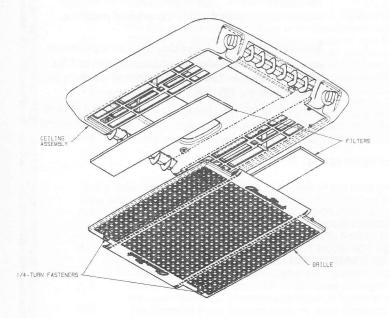


FIGURE 2

II. Service Person

- A. Electrical All electrical work and/or inspection should be performed only by qualified service personnel. Contact your nearest Airxcel, Inc. Service Center if electrical problems should arise.
- B. Check Points Failure to start or to cool the air are sometimes problems with air conditioning units.
 The Coleman-Mach RV air conditioner is designed to operate on 115 volt electrical power. If the compressor on the air conditioner fails to start, check with your Airxcel, Inc. Service Center to determine

that the proper wire size is connected to the unit, the proper circuit breakers are installed as protection devices on the electrical circuit and the proper sized extension cord is being used for the distance covered from the utility outlet to the RV. The required minimum wire size is #12 AWG for lengths up to 25 feet (larger wire size for greater distances). Each air conditioning unit must be protected with a 20 amp time delay fuse or circuit breaker.

If the air conditioner continues to trip off the circuit breakers, have an electrician check the starting amperage and running amperage on the unit. If the circuit breaker continues to trip off and the electrical consumption is found to be normal, it will require the replacement of the faulty circuit breaker.

If all electrical power to the air conditioner is normal but neither the fan or the compressor will operate, the connector plug located behind the ceiling assembly control box should be checked to determine whether it is faulty.

On the heating-cooling air conditioner models, if all electrical power to the unit is normal and the fan runs but you never get any heated air, then the electrical plug to the heating unit should be checked for a secure connection. If this does not correct the malfunction, the heating thermostat or limit switch may be faulty.

- C. Mechanical Integrity The air conditioner should be inspected periodically to be sure that the bolts which secure the unit to the roof are tight and in good shape. Also, an examination of the plastic shroud covering the air conditioner on the top of the roof should be made periodically. Be sure the four mounting screws and washers are snug and holding the shroud to the air conditioner. Also examine the shroud to be sure it is not developing cracks or has suffered damage from impact.
- D. Lubrication

DANGER

DISCONNECT THE POWER SUPPLY TO THE UNIT BEFORE SERVICING TO PREVENT A SHOCK HAZARD OR POSSIBLE INJURY FROM MOVING PARTS.

The blower drive motor on some units may include oiling cups at the top of the motor. There is no requirement to oil the journals under normal operating conditions. However, if lubrication to the unit is desired, use only SAE 20 non-detergent type oil. DO NOT OVER OIL – three to four drops in each oil hole once a year if sufficient.

V. WALL THERMOSTAT IDENTIFICATION AND OPERATION

If your Coleman-Mach roof top heat pump is controlled by a wall thermostat, refer to the operation manual that was included with the thermostat.

VI. WARRANTY SERVICE

Let's face it. Sometimes even the best products may need service. To obtain warranty service on your Coleman-Mach air conditioner, please contact your selling dealer, or you may access our web site on the Internet at www.rvcomfort.com for answers to the most frequently asked questions and service center locations.

Airxcel, Inc. support help may be accessed by e-mail at RVPSupport@Airxcel.com.

All written correspondence should be directed to:

Airxcel, Inc. RV Products Division P.O. Box 4020 Wichita, KS 67204

IMPORTANT

- 1. Carefully read your limited two year product warranty which is packed with the product.
- 2. An optional three year extended parts only contract is available at an additional cost of \$89.95. To obtain this optional three year parts contract, fill out the application card stapled to the front of this envelope. Please mail the card and a check or money order to the address above. Applications must be made within ninety (90) days of the original purchase.
- 3. Inquiries about your Coleman-Mach air conditioner must include the model and serial numbers and the date of purchase. The model and serial numbers can be found on the I.D. label located on the air conditioner basepan return air opening at the bottom of the roof unit. This information may also be found on the air conditioner rating plate.

OPTIONAL THREE YEAR EXTENDED PARTS CONTRACT

NOT RENEWABLE



NOT REFUNDABLE

| A/C MODEL NUMBER | |
|-------------------------|---|
| A/C SERIAL NUMBER | |
| CONTRACT # | |
| CONTRACT EFFECTIVE DATE | and the results of the second |

1. This Extended Parts Contract must be purchased within 90 days of the original (first) retail purchase of the covered air conditioner. The consumer must establish these dates by copy of the sales receipt. During the term of this Extended Parts Contract, Airxcel, Inc. agrees to furnish without charge any replacement parts required for the covered air conditioner because of defects in material or workmanship. This Extended Parts Contract is for a term of three years and begins the day following the date on which the original two-year new product warranty expires. This Extended Parts Contract is not transferable to any subsequent purchaser of the covered air conditioner.

(OPTIONAL at ADDITIONAL COST)

- This Extended Parts Contract does not cover any labor charges or other charges.
- The Extended Parts Contract duration shall be calculated as follows:
 - 3.1 The contract duration on replacement parts furnished under this parts replacement contract shall be for the unexpired duration under this contract.
 - 3.2 If the air conditioner is installed as original equipment in a recreational vehicle, the duration shall begin two (2) years from the date of the original purchase of the recreational vehicle.
 - 3.3 If the air conditioner is installed in a recreational vehicle previously purchased by the consumer, the duration shall begin two (2) years from the date of the purchase of the air conditioner.
 - 3.4 The consumer must establish these dates by presenting this certificate at the time the claim is made.
- 4. The consumer should proceed as follows to obtain contract performance:
 - 4.1 To obtain warranty service on your Coleman-Mach air conditioner, please contact your selling dealer, or you may access our web site on the Internet at www.rvcomfort.com for answers to the most frequently asked questions and service center locations. Schedule appointments for service assistance. It is the contracted consumer's responsibility to transport the air conditioner to the servicers location. Collect service agreement calls will not be accepted by Airxcel, Inc. or field servicers.
 - 4.2 All warranty parts covered by this Extended Parts Contract shall be obtained from Airxcel, Inc.

EXCEPTIONS AND EXCLUSIONS

- 5. To the extent any or all of the following exclusions or any other provisions of this Extended Parts Contract are prohibited by any federal, state or municipal law, and cannot be preempted, they shall not be applicable.
 - 5.1 IN THE EVENT THERE ARE OTHER APPLICABLE PARTS REPLACEMENT CONTRACTS, THEN THIS EXTENDED PARTS CONTRACT IS SECONDARY TO THOSE CONTRACTS AND ONLY PARTS EXCLUDED UNDER THE OTHER CONTRACT AND INCLUDED UNDER THIS EXTENDED PARTS CONTRACT WILL BE COVERED.
 - 5.2 THIS EXTENDED PARTS CONTRACT DOES NOT COVER CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY.
 - 5.3 This Extended Parts Contract applies only to products sold at retail in the United States.
 - 5.4 This Extended Parts Contract does not cover damages caused by mishandling, neglect, lightning, corrosive atmosphere, collision, improper installation, improper application or improper energy supply.
 - 5.5 This Extended Parts Contract does not cover damages caused by failure to perform normal and routine maintenance as set out in the operation and maintenance instructions.
 - 5.6 This Extended Parts Contract does not cover damages or equipment failure caused by the use of non-Airxcel, Inc. parts or components.
 - 5.7 This Extended Parts Contract shall not apply if the nameplate is removed or defaced.
 - This Extended Parts Contract shall not apply if the vehicle on which the air conditioner is installed is used for maritime activities.
 - 5.9 This Extended Parts Contract shall not apply if the vehicle on which the air conditioner is installed is used for commercial purposes involving off highway travel.
 - 5.10 This Extended Parts Contract shall not apply if the air conditioner is installed on a semi-tractor and/or commercial trailer.
 - 5.11 This Extended Parts Contract does not include shrouds, filters or complete air conditioners

Airxcel, Inc. RV Products Division P.O. Box 4020 Wichita, KS 67204

1970M635 Rev. 1 (11-09) PP

TABLE DES MATIÈRES

| I. | Renseignements généraux | 8 |
|------|--|----|
| II. | Panneau de contrôle de plenum de plafond standard | 8 |
| III. | Fonctionnement du plénum de plafond standard | 9 |
| IV. | Entretien | |
| V. | Fonctionnement et identification du thermostat mural | |
| VI. | Service de garantie | 11 |

I. RENSEIGNEMENTS GÉNÉRAUX

Ces climatiseurs de toit furent conçus pour fonctionner à partir d'une source d'alimentation de 115 V.c.a., 60 Hz, 1 phase. Lorsqu'un climatiseur ne fonctionne pas correctement, l'alimentation électrique doit être examinée par un technicien qualifié afin de vérifier que le climatiseur reçoit la bonne alimentation de courant.

La capacité du climatiseur de maintenir la température intérieure voulue dépend du gain de chaleur du véhicule récréatif. La taille du véhicule, le nombre de fenêtres, la quantité d'isolant, l'exposition directe au soleil, la température extérieure ainsi que le nombre de personnes dans le véhicule peuvent tellement augmenter la chaleur que la capacité du climatiseur est dépassée.

En règle générale, l'air qui entre dans le climatiseur sera refroidi d'environ 15 à 20 degrés selon la température et l'humidité de l'extérieur.

Par exemple, si l'air qui entre dans les grilles d'entrée d'air du climatiseur est de 80 degrés F. (24 degrés C), l'air quittant les grilles de sortie d'air du climatiseur sera de 60 à 65 degrés F. (13 à 16 degrés C).

Aussi longtemps que cette différence de température est maintenue entre l'entrée et la sortie d'air, le climatiseur fonctionne à sa capacité. Si l'on ne peut conserver la température intérieure voulue (normalement 80 degrés F. (24 degrés C)), alors le gain de chaleur du VR est trop élevé pour la capacité du climatiseur.

Le fait de stationer le véhicule à l'ombre, de garder les fenêtres et les portes fermées et d'éviter d'utiliser des appareils dégageant de la chaleur aidera à réduire le gain de chaleur. On peut aussi considérer ajouter de l'isolant et des verres teintés (tout particulièrement dans les caravans non-isolées).

REMARQUE

Le montage de chauffage Elect-A-Heat optionnel est conçu pour enlever l'air froid à l'intérieur du véhicule un peu trop frais pour le confort. Le système de chauffage est efficace pour «enlever le froid» mais non pas pour remplacer l'appareil de chauffage.

Climatiseurs de toit R410A

Circuit de blocage du contacteur haute pression

Les climatiseurs et les thermopompes au frigorigène R410A comportent un circuit de sûreté du contacteur haute pression, installé en usine. Dans l'éventualité d'une anomalie (une défaillance du moteur du ventilateur, un serpentin de condensation sale, des filters encrassés), le contacteur haute pression empêche le compresseur de rester en marche. Quand le contacteur haute pression est déclenché, ce circuit de sûreté bloque le compresseur, ce qui empêche ce dernier de redémarrer ou de fonctionner jusqu'à ce que l'alimentation de 115 V c.a. soit coupée puis rétablie de façon à réinitialiser le circuit de sûreté du contacteur haute pression. Si le blocage du contacteur haute pression se déclenche à maintes reprises, vous devez faire réparer l'appareil par un technician compétent.

II. PANNEAU DE CONTRÔLE

Si votre climatiseur de VR fonctionne à partir d'un panneau de contrôle au plafond, il y a alors trois commandes au plafond pour aider à contrôler le climatiseur. Les voici :

A. Le sélecteur – le sélecteur détermine le mode de fonctionnement du climatiseur. En le tournant, l'opérateur peut obtenir toutes les fonctions du système voulues. Celles-ci variant selon les options de l'unité du toit et du plafond. Le figure 1 illustrents l'emplacement du sélecteur et énumèrents toutes les fonctions disponibles par modèle.

La section «fonctionnement» explique les caractéristiques de fonctionnement de chaque mode.

B. Le thermostat (contrôle de température – sous le mode de refroidissement, le thermostat contrôle le réglage de température «ON» (marche) et «OFF» (arrêt) du chauffage.

Pour les modèles «chaleur/refroidissement», le thermostat contrôle aussi les réglages de température «ON» et «OFF» du radiateur. Voir figure 1 à la page 3.

III. FONCTIONNEMENT

- I. Pour le refroidissement (se reporter aux figure 1, page 3).
- A. Placer le sélecteur à la position «LOW COOL» (refroidissement faible) ou à «HIGH COOL» (refroidissement fort).
- B. Tournez le thermostat (régulateur de température) sur la position qui vous convient le mieux. Le thermostat enclenchera le compresseur aussitôt que la température de l'air entrant dans le climatiseur s'élèvera à un ou deux degrés au-dessus du réglage sélectionné. Ensuite, le compresseur continuera de s'enclencher et de s'arrêter en fonction de la température de l'air entrant dans le climatiseur jusqu'à ce que vous mettiez le sélecteur sur un autre mode de fonctionnement.
- Placer les aérateurs dans la direction voulue pour l'écoulement de l'air déchargé.

Remarque: Le ventilateur marche toujours de façon égale, seul le compresseur effectue des cycles en fonction du thermostat.

II. Fonctionnement durant les nuits plus froides (fonctionnement de refroidissement)

Lorsque, le soir ou la nuit, la température extérieure tombe en dessous de 24 °C, il est important que le thermostat (le régulateur de température) soit mis au milieu des positions « Warmer » et « Cooler ». Si le thermostat est placé sur « Cooler », le serpentin évaporateur peut se recouvrir de givre et, par conséquent, cesser de refroidir l'air. Le jour, lorsque la température remonte au-dessus de 24 °C, remettez le thermostat à la position désirée.

REMARQUE

S'il y a de la glace qui s'accumule, il est alors nécessaire de laisser le serpentin du refroidisseur (évaporateur) dégeler avant de reprendre le fonctionnement de refroidissement normal. Durant ce temps, faire fonctionner l'appareil en position « HIGH FAN » (ventilateur fort) avec le système au maximum de la circulation d'air. Lorsque cette circulation augmente ou fonctionne au maximum, le serpentin du refroidisseur ne devrait pas avoir de glace.

III. Fonctionnement en courts cycles

Lorsqu'un climatiseur fonctionne, son compresseur fait circuler le réfrigérant sous haute pression. Arrêté, il faut deux à trois minutes pour que cette haute pression s'égalise.

Le compresseur du climatiseur est incapable de démarrer contre une haute pression, donc, lorsque le climatiseur est arrête, il est important de la laisser arrêter pendant deux à trois minutes avant de le faire redémarrer.

Les compresseurs fonctionnant en courts cycles (ou lancés avant que les pressions ne soient égalisées) déclencheront parfois le disjoncteur ou une surcharge.

IV. Pour chauffer (modèle de plafond «Elect-A-Heat» seulement), se reporter aux figure 1, page 3.

Le montage de chauffage Elect-A-Heat optionnel est conçu pour enlever l'air frais à l'intérieur du véhicule, un peu trop froid pour le confort. Le système de chauffage est efficace pour «enlever le froid», mais non pas pour remplacer l'appareil de chauffage.

Ne pas s'attendre à ce que le serpentin de chauffage de votre appareil de chauffage produise de l'incandesence. Puisque le ventilateur aspire de l'air froid et le fait passer sur le serpentin, lorsque l'air passe directement sur le serpentin.

- A. Placer le sélecteur à «LOW HEAT» (faible chaleur) et le ventilateur fonctionne à vitesse réduite avec la sortie de chaleur au maximum.
- B. Faire tourner le thermostat (contrôle de temperature) à la position la plus confortable. Le thermostat met le compresseur en marche lorsque la température de l'air qui entre dans le climatiseur diminue de quelques degrés sous le réglage choisi. Lorsque la température de l'air qui entre dans le climatiseur augmente au-dessus de ce réglage, il arrêtera le compresseur. Le chauffage continuera à passer de marche à arrêt de la manière indiquée précédemment jusqu'à ce que le sélecteur soit placé dans un autre mode de fonctionnement.
- C. Placer les aérateurs dans la direction voulue pour l'écoulement de l'air déchargé.

La température de décharge d'air peut être contrôlée jusqu'à un certain point en ouvrant ou en fermant les aérateurs.

Lorsque les aérateurs sont fermés, l'on peut atteindre l'air de décharge le plus chaud. Les aérateurs entièrement ouverts déchargeront l'air chaud vers l'arrière et l'avant du véhicule pour une circulation plus efficace et un réchauffement plus rapide. Bien que la température de l'air soit moins élevée lorsque les aérateurs sont entièrement ouverts, la capacité de chauffage sera encore la même.

- V. Pour la circulation d'air seulement (se reporter aux figure 1, page 3).
- A. Placer le sélecteur à «LOW FAN» (ventilateur faible) ou pour une circulation d'air maximale, à «HIGH FAN» (ventilateur fort).

B. Placer les aérateurs dans la direction voulue pour l'écoulement de l'air déchargé.

REMARQUE

Lorsque le sélecteur est en position «LOW FAN» ou «HIGH FAN», le moteur à soufflerie fonctionne continuellement.

IV. ENTRETIEN

I. Propriétaire

Un des plus grands avantages de votre nouveau climatiseur de Coleman-Mach est que l'entretien nécessaire pour conserver votre appareil en bon état est minime. En fait, tout ce que vous avez à faire, comme propriétaire, est de nettoyer et de remplacer les filtres.

Les filtres sont fabriqués de fibres naturelles non-allergènes de longue durée que l'on peut nettoyer et réutiliser, et ils filtrent entièrement l'air circulé lorsque le climatiseur est en marche. Si les filtres ne sont pas nettoyés à intervalles réguliers, ils peuvent se bloquer partiellement par de la poussière, de la graisse, de la peluche, etc. Un filter bloqué provoquera une perte de volume d'air et peut éventuellement causer l'accumulation de glace sur le serpentin du refroidisseur (évaporateur).

IMPORTANT

Ne pas faire fonctionner votre climatiseur pendant le longues périodes sans filtre.

Lorsque le climatiseur fonctionne sans filtre, il peut y avoir un problème plus grave car la poussière, la graisse, la peluche, etc. arrêtées normalement par le filtre s'accumulent maintenant dans le serpentin du refroidisseur. Ceci provoque une perte de volume d'air et une accumulation possible de glace sur le serpentin du refroidisseur, mais cela peut aussi provoquer de graves dommages aux composants du climatiseur.

Nous recommandons de nettoyer ou de changer les filtres au moins aux deux semaines lorsque le climatiseur fonctionne.

Nettoyer et/ou changer les filtres:

- Retirer les deux vis qui retiennent le couvercle du montage du plafond. Voir la figure 2 à la page 5.
- 2. Abaisser le couvercle et glisser délicatement hors des axes du bouton de contrôle.
- 3. Sortir les filtres et nettoyer ou échanger avec d'autres filtres (voir la figure 2 à la page 5).

4. Si le véhicule est doté d'un montage de plafond affleurant, retirez les quatre vis des grilles de reprise d'air. Voir la figure 2 à la page 5. Retirez le filtre de la grille et nettoyez-le ou remplacez-le avec de nouveaux filtres.

REMARQUE

Si des filtres de remplacement sont nécessaries, on peut se les procurer de la plupart des centres de service autorisés Airxcel, Inc. Il est recommandé de toujours avoir des filtres de rechange dans votre VR en tous temps pour remplacer les filtres détériorés, usés ou déchirés.

II. Responsable de l'entretien

- A. Électricité Tous les travaux et/ou inspections électriques ne doivent être effectués que par un personnel d'entretien qualifié. Contactez votre centre d'entretien Airxcel, Inc. s'il y a des problèmes.
- Points de contrôle Les climatiseurs ont quelquefois des problèmes de démarrage ou de refroidissement. Le climatiseur Coleman-Mach est conçu pour fonctionner sur un courant électrique de 115 V. Au cas où le compresseur de climatiseur refuserait de démarrer, contacter le centre d'entretien Airxcel, Inc. pour déterminer si le climatiseur est alimenté par un câblage de calibre adéquate, si la protection du circuit électrique est assurée par des disjoncteurs appropriés et si le calibre du câble de rallonge, raccordant la prise de secteur du véhicule, est aussi adéquat. Jusqu'à 7,6 m, le calibre minimum de fil requis est 1,5 mm (#12 AWG). Un calibre plus fort est requis pour une distance plus longue. Chaque climatiseur doit être protégé par un fusible à action différée ou par un disjoncteur.

Si le climatiseur fait déclencher continuellement le disjoncteur, faire vérifier par un électricien l'ampérage de démarrage et de marche. Si le déclenchement du disjoncteur se poursuit alors que la consommation électrique reste normale, il sera nécessaire de remplacer le disjoncteur défectueux.

Si, alors que l'alimentation électrique du climatiseur est normale, ni le ventilateur ni le compresseur ne fonctionne, vérifier la connexion de la prise située à l'arrière de la boîte de commande du module.

Pour les modèles de climatiseur à air chaud et à air froid, si tout le courant électrique à l'appareil est normal et si le ventilateur fonctionne, mais sans air chaud, alors, il faut vérifier l'unité de chauffage pour s'assurer d'une bonne connexion. Si ceci ne corrige pas la panne, il se peut que le problème réside avec le thermostat de chauffage ou le disjoncteur.

C. Intégrité mécanique – Le climatiseur devrait être inspecté régulièrement pour s'assurer que les boulons qui retiennent l'appareil au toit sont serrés et en bon état. Il serait aussi utile de faire un examen du couvercle de plastique couvrant le climatiseur sur le toit. S'assurer que les quatre vis de montage et les rondelles sont bien en place et retiennent le couvercle au climatiseur. Examiner aussi le couvercle s'assurer qu'il n'y a aucune fissure ou de dommages suite à un choc.

D. Lubrification

DANGER

DÉBRANCHER LA SOURCE D'ALIMENTATION À L'APPAREIL AVANT TOUT ENTRETIEN POUR ÉVITER LES DANGERS DE CHOC ÉLECTRIQUE OU LA POSSIBILITÉ DE BLESSURES CAUSÉES PAR LES PIÈCES MOBILES.

Le moteur d'entraînement de la soufflerie de certains appareils peut inclure des godets graisseurs au sommet du moteur. Il n'y a aucun raison d'huiler les tourillons sous des conditions normales de fonctionnement. S'il faut toutefois lubrifier l'appareil, utiliser seulement de l'huile du type non-détergent SAE 20. NE PAS METTRE TROP D'HUILE – trois à quatre gouttes dans chaque trou d'huile, une frois l'an, suffisent.

V. IDENTIFICATION ET FONCTIONNEMENT DU THERMOSTAT MURAL

Si votre Coleman-Mach air conditioner avec Heat Pump est controle par un thermostat, referrer via le livre d'operation inclus avec le thermostat.

VI. GARANTIE

Il convient de le dire, même les produits de la plus haute qualité ont parfois besoin d'être réparés. Pour vous prévaloir de réparations sous garantie pour votre climatiseur Coleman-Mach, veuillez communiquer avec votre détaillant. Vous pouvez également visiter notre site Web á l'adresse www.rvcomfort.com pour consulter les réponses aux questions les plus fréquemment posées ainsi que les addresses des centres de service.

De même, vous pouvez entrer en contact avec le service de soutien à la clientèle par courrier électronique au RVPSupport@Airxcel.com.

Toute correspondance écrite doit être envoyée à l'adresse suivante:

Airxcel, Inc. RV Products Division P.O. Box 4020 Wichita, KS 67204

IMPORTANT

- 1. Lisez soigneusement la garantie limitée de deux ans, laquelle est emballée avec le produit.
- Vous pouvez également vous procurer un contrat prolongé de trois ans couvrant uniquement les pièces détachables moyennant un supplément de 89,95 \$US. Pour ce faire, remplissez la carte de demande agrafée à l'avant de cette enveloppe. Veuillez envoyer la carte et un chèque ou un mandat à l'adresse mentionnée ci-dessus. Les demandes doivent être faites dan les quatre-vingt-dix (90) jours suivant l'achat initial.
- 3. Pour tout renseignement à propos de votre climatiseur de Coleman-Mach, vous devez indiquer le nom du modèle, les numéros de série et la date d'achat. Le nom du modèle et les numéros de série sont inscrits sur l'étiquette de l'identification placée sur l'orifice de reprise dans le plateau situé à la partie inférieure du climatiseur de toit. Ces informations figurant aussi sur la plaque signalétique du climatiseur.



RV Products Division

LIMITED TWO YEAR AIR CONDITIONER WARRANTY

- 1. These products are warranted to the retail consumer for two (2) year against defects in material and workmanship. The warranty is transferable from owner to owner.
- 2. Any defective parts will be repaired. All replacements and exchanges will be made using new, remanufactured or refurbished parts or components at the option of Airxcel, Inc. Airxcel, Inc. will pay its established warranty labor rates to the Airxcel, Inc. Authorized Service Centers or Servicing Dealers who have service agreements with Airxcel, Inc. for repairs or replacements made under this warranty. The warranty covers transportation charges for the shipment of replacement parts to the service center.
- 3. The warranty duration shall be calculated as follows:
 - 3.1 The warranty on repaired or replaced parts furnished pursuant to this warranty shall be for the unexpired duration of the original warranty.
 - 3.2 If the product is installed as original equipment on a vehicle, the warranty period shall begin on the date of the original purchase of the vehicle.
 - 3.3 In all other instances, the warranty shall begin on the date of the products purchase.
 - 3.4 The Consumer must establish these dates by presenting legible papers at the time the warranty claim is made showing the applicable purchase date.
- 4. The Consumer should proceed as follows to obtain warranty performance:
 - 4.1 To obtain warranty service on your Coleman-Mach air conditioner, please contact your selling dealer, or you may access our web site on the Internet at www.rvcomfort.com for answers to the most frequently asked questions and service center locations. Call the Service Center and report the problem. Only Authorized Service Centers may perform warranty obligations during the two year warranty period. Service performed by non-authorized service personnel may void all warranty rights. If local authorized service cannot be obtained or you cannot obtain proper service under the terms of this warranty, please write to: Airxcel, Inc., P.O. Box 4020, Wichita, Kansas 67204 or call 316-832-4357.
 - 4.2 The recreational vehicle must be taken to the Service Center for required service. There are no provisions for mileage allowance, air conditioner removal or transportation expenses.
 - 4.3 All payment for in warranty expenses shall be made by Airxcel, Inc. to the Service Center and not to the Consumer.

EXCEPTIONS AND EXCLUSIONS

- 5. To the extent any or all of the following exclusions or any other provisions of this warranty are prohibited by any Federal, State or Municipal laws, and cannot be preempted, they shall not be applicable:
 - 5.1 THERE ARE NO OTHER EXPRESSED WARRANTIES EXCEPT AS SET OUT ABOVE AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE NO LONGER THAN THE DURATION OF THE EXPRESSED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
 - 5.2 THIS WARRANTY DOES NOT COVER CONSEQUENTIAL DAMAGE, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
 - 5.3 This warranty applies only to products sold at retail in the United States and Canada.
 - 5.4 This warranty does not cover damage caused by mishandling, neglect, lightning, corrosive atmosphere, improper installation, improper application or improper energy supply.
 - 5.5 This warranty does not cover damages caused by failure to perform normal and routine maintenance as set out in the operation and maintenance instructions.
 - 5.6 This warranty does not cover damages or equipment failure caused by the use of non-Airxcel, Inc. parts or components.
 - 5.7 This warranty shall not apply if the nameplate is removed or defaced.
 - 5.8 This warranty shall not apply if the vehicle on which the air conditioner is installed is used for maritime activities,
 - 5.9 This warranty shall not apply if the air conditioner is installed on semi-tractors and/or semi-tractor trailers.
 - 5.10 This warranty shall not apply if the vehicle/structure on which the air conditioner is installed is used for commercial purposes involving off highway travel.
 - 5.11 This warranty does not cover air conditioner damage or component failures that are the result of transportation or application vibration.
- 6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Airxcel, Inc. RV Products Division P.O. Box 4020 Wichita, KS 67204